

DIMTAD System Variable — GstarCAD 2027

5379 kbadmin September 26, 2026 [Command Reference](#) 0 18

DIMTAD System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTAD system variable is used to control the vertical position of text relative to dimension line.

Type	Integer
Saved in	Drawing
Initial value	0 (Imperial) or 1(Metric)
Range	0,1,2,3,4

System Variable Value:

- 0:**center the dimension text between the extension line
- 1:** center the dimension text between the extension line
- 2:** Places the dimension text on the side of the dimension line farthest away from the defining points
- 3:** place the dimension text according to JIS
- 4:** place the dimension text below the dimension line

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5379>