

DIMTDEC System Variable — GstarCAD 2027

5380 kbadmin September 26, 2026 [Command Reference](#) 0 8

DIMTDEC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTDEC system variable is used to set the number of decimal places displayed in tolerance values for primary units in a dimension.

Type	Integer
Saved in	Drawing
Initial value	4(Imperial) or 2(Metric)

This system variable has no effect unless DIMTOL is set to On. The default for DIMTOL is Off.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5380>