

# DIMTFAC System Variable — GstarCAD 2027

5381 kbadmin September 26, 2026 [Command Reference](#) 0 13

## DIMTFAC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The DIMTFAC system variable is used to set the scale factor for text height of fraction and tolerance relative to dimension text height. This has the same effect as settings of DIMTXT system variable.

|               |         |
|---------------|---------|
| Type          | Real    |
| Saved in      | Drawing |
| Initial value | 1.0000  |

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5381>