

DIMTIH System Variable — GstarCAD 2027

5384 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMTIH System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTIH system variable is used to control position of dimension text in extension line for all types of dimension except ordinate dimension..

Type	Parameter
Saved in	Drawing
Initial value	On (Imperial) or Off (Metric)

System Variable Value:

- Off:** align the text and dimension line
- On:** draw text horizontally

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5384>