

DIMTM System Variable — GstarCAD 2027

5386 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMTM System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTM system variable is used to control the minimum tolerance limit for dimension text when the DIMTOL or DIMLIM is on.

Type	Real
Saved in	Drawing
Initial value	0.0000

The DIMTM system variable can recognize a value with symbols. If the DIMTOL is on and the settings of DIMTP and DIMTM are the same, it can create a tolerance value. If the values of DIMTM and DIMTP are different, the upper tolerance is drawn above the lower, and a plus sign is added to the DIMTP value if it is positive.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5386>