

DIMTOH System Variable — GstarCAD 2027

5390 kbadmin September 26, 2026 [Command Reference](#) 0 12

DIMTOH System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTOH system variable is used to control the position of dimension text

Type	Parameter
Saved in	Drawing
Initial value	On(Imperial) or Off (Metric)

System Variable Value:

- Off:** align text and dimension line
- On:** create text horizontally

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5390>