

DIMTXTDIRECTION System Variable — GstarCAD 2027

5398 kbadmin September 26, 2026 [Command Reference](#) 0 13

DIMTXTDIRECTION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMTXTDIRECTION system variable is used to specify the dimension text reading direction.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** display dimension text in left-to- right reading style
- 1:** display dimension text in right-to-left reading style

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5398>