

# DIVMESHYPYRBASE System Variable — GstarCAD 2027

5414 kbadmin September 26, 2026 [Command Reference](#) 0 16

## DIVMESHYPYRBASE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The DIVMESHYPYRBASE system variable is used to set the number of subdivisions from the base center to its perimeter of mesh pyramid.

|               |               |
|---------------|---------------|
| Type          | Integer       |
| Saved in      | User-settings |
| Initial value | 3             |

This setting can affect the new mesh pyramid created by MESH command.  
This value can also be set in "Mesh Primitive Option" dialog box.

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5414>