

DIVMESHSPHEREHEIGHT System Variable — GstarCAD 2027

5418 kbadmin September 26, 2026 [Command Reference](#) 0 21

DIVMESHSPHEREHEIGHT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIVMESHSPHEREHEIGHT system variable is used to set the number of subdivisions between the two axis endpoints of mesh sphere.

Type	Integer
Saved in	User-settings
Initial value	6

This setting can affect the new mesh sphere created by MESH command.
This value can also be set in "Mesh Primitive Option" dialog box.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5418>