

DONUTOD System Variable — GstarCAD 2027

5427 kbadmin September 26, 2026 [Command Reference](#) 0 16

DONUTOD System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DONUTOD system variable is used to set the default outside of diameter for donuts.

Type	Real
Saved in	Not saved
Initial value	1.0000

This value can not be zero. If the value of DONUTID is larger than DONUTOD, they will exchange when running next command.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5427>