

DWFOSNAP System Variable — GstarCAD 2027

5435 kbadmin September 26, 2026 [Command Reference](#) 0 5

DWFOSNAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DWFOSNAP system variable is used to control whether to active object snap mode for geometric drawing in attached DWF or DWFx reference underlay.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay
- 1:** disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5435>