

DWGCODEPAGE System Variable — GstarCAD 2027

5437 kbadmin September 26, 2026 [Command Reference](#) 0 6

DWGCODEPAGE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DWGCODEPAGE system variable is used to store the same value as the SYSCODEPAGE system variable for compatibility.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5437>