

DWGTITLED System Variable — GstarCAD 2027

5440 kbadmin September 26, 2026 [Command Reference](#) 0 11

DWGTITLED System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DWGTITLED system variable is used to specify whether the current drawing is named or not.
(Ready-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** the drawing has named
- 1:** the drawing has not named

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)