

DYNCONSTRAINTMODE System Variable — GstarCAD 2027

5442 kbadmin September 26, 2026 [Command Reference](#) 0 15

DYNCONSTRAINTMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DYNCONSTRAINTMODE system variable is used to display hide dimension constraint when selected constrained objects.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** keep constrain hidden when selected objects
 - 1:** display hidden constrain when constrain objects selected
- Note:** when hidden dynamic constraint, this system variable takes effect.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5442>