

DYNPIFORMAT System Variable — GstarCAD 2027

5447 kbadmin September 26, 2026 [Command Reference](#) 0 20

DYNPIFORMAT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DYNPIFORMAT system variable is used to control whether pointer input use polar or Cartesian format for coordinates.

Type	Parameter
Saved in	Registry
Initial value	0
Range	0,1

This setting is only suitable for the second or next point.

System Variable Value:

- 0: polar
- 1: Cartesian

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5447>