

DYNTOOLTIPS System Variable — GstarCAD 2027

5450 kbadmin September 26, 2026 [Command Reference](#) 0 5

DYNTOOLTIPS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DYNTOOLTIPS system variable is used to control the tooltips which are affected by tooltip appearance settings.

Type	Parameter
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:**only dynamic input value fields
- 1:** all drafting tooltips

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5450>