

Delete Row — GstarCAD 2027

5455 kbadmin September 26, 2026 [Command Reference](#) 0 15

Delete Row

[GstarCAD 2027](#) · [Command Reference](#)

The BGSF function can delete the row of the table you specified.

Operation Steps:

- 1.Start the command.
- 2.Specify the cell of row for delete.
- 3.System will delete the row you specified.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5455>