

Detach Leaders from Annotation — GstarCAD 2027

5458 kbadmin September 26, 2026 [Command Reference](#) 0 11

Detach Leaders from Annotation

[GstarCAD 2027](#) · [Command Reference](#)

The QLDETACHSET command is used to detach leader line from mtext, tolerance, or block reference object.

Select objects: Select leader line

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5458>