

ELEVATION System Variable — GstarCAD 2027

5490 kbadmin September 26, 2026 [Command Reference](#) 0 8

ELEVATION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ELEVATION system variable is used to store the elevation in current UCS for new objects.

Type	Real
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5490>