

ERSTATE System Variable — GstarCAD 2027

5494 kbadmin September 26, 2026 [Command Reference](#) 0 10

ERSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ERSTATE system variable is used to indicate the "External Reference" palettes turns on or off.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	Unknown
Range	0,1

System Variable Value:

- 0:Off
- 1:On

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)