

EXPLMODE System Variable — GstarCAD 2027

5497 kbadmin September 26, 2026 [Command Reference](#) 0 18

EXPLMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The EXPLMODE system variable is used to control whether the EXPLODE command supports non-uniformly scaled blocks.

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not explode non-uniformly scaled blocks
- 1:** explode non-uniformly scaled blocks

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)