

EXPORTMODELSPACE System Variable — GstarCAD 2027

5499 kbadmin September 26, 2026 [Command Reference](#) 0 19

EXPORTMODELSPACE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The EXPORTMODELSPACE system variable is used to specify which part of drawing in model space to export to a DWF, DWFx or PDF file.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2

System Variable Value:

- 0:display
- 1:extent
- 2>window

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5499>