

EXTMIN System Variable — GstarCAD 2027

5503 kbadmin September 26, 2026 [Command Reference](#) 0 15

EXTMIN System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The EXTMIN system variable is used to store the value of left-bottom corner point in the drawing extents.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	Unknown

If some new objects created outside of limits, users can use "All" or "Extent" option of ZOOM command to scale objects to new extents.
The EXTMIN system variable value is the world coordinate value in current space.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5503>