

Explode Attribute to Text — GstarCAD 2027

5507 kbadmin September 26, 2026 [Command Reference](#) 0 17

Explode Attribute to Text

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

This command is used to explode selected blocks, preserving the block layer and converting attribute values to text objects. The component objects are placed on the layer of the block and do not revert to their original layers. The values of any attribute objects are preserved by converting them to text objects. The exploded attributes assume the original attribute definition's layer and style.

Command Access:

Menu: Express > Blocks > Explode Attributes to Text

Ribbon:

Express > Blocks > Explode Attributes to Text

Toolbar: ET: Blocks Tools >

Explode Attributes to Text

Command: BURST

Alias: /

Command Prompts:

Select object:

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5507>