

FACETERMAXGRID System Variable — GstarCAD 2027

5520 kbadmin September 26, 2026 [Command Reference](#) 0 14

FACETERMAXGRID System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The FACETERMAXGRID system variable is used to set internal parameter

Type	Integer
Saved in	User-settings
Initial value	4096
Range	0 ~ 4096

Note: this system variable reflects the absolute value of objects whose smoothness is zero.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5520>