

FACETERMESHTYPE System Variable — GstarCAD 2027

5521 kbadmin September 26, 2026 [Command Reference](#) 0 10

FACETERMESHTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The FACETERMESHTYPE system variable is used to set type for new meshes.

Type	Integer
Saved in	User-settings
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** convert objects to optimized mesh objects with fewer faces
- 1:** convert objects to faces, most of them are quadrilaterals
- 2:** convert objects to faces, most of them are triangles

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5521>