

FACETERMINVGRID System Variable — GstarCAD 2027

5523 kbadmin September 26, 2026 [Command Reference](#) 0 13

FACETERMINVGRID System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The FACETERMINVGRID system variable is used to set internal parameters.

Type	Integer
Saved in	User-settings
Initial value	0
Range	0 ~ 1023

The value of FACETERMINUGRID can not be larger than FACETERMAXGRID.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5523>