

FIELDDISPLAY System Variable — GstarCAD 2027

5528 kbadmin September 26, 2026 [Command Reference](#) 0 10

FIELDDISPLAY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The FIELDDISPLAY system variable is used to control whether to display field with gray background.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

Do not to plot background.

System Variable Value:

- 0: display field without background
- 1: display field with gray background

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5528>

