

# FRONTZ System Variable — GstarCAD 2027

5537 kbadmin September 26, 2026 [Command Reference](#) 0 7

## FRONTZ System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The FRONTZ system variable is used to store the offset from current front clipped plane to target plane in drawing units.  
(Read-Only)

|               |         |
|---------------|---------|
| Type          | Real    |
| Saved in      | Drawing |
| Initial value | 0.0000  |

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5537>