

GEOMARKERVISIBILITY System Variable — GstarCAD 2027

5547 kbadmin September 26, 2026 [Command Reference](#) 0 8

GEOMARKERVISIBILITY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GEOMARKERVISIBILITY system variable is used to control the visibility of geographic marker.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** the geographic mark is invisible
- 1:** the geographic mark is visible

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5547>