

GFSHIFT System Variable — GstarCAD 2027

5554 kbadmin September 26, 2026 [Command Reference](#) 0 17

GFSHIFT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GFSHIFT system variable is used to specify the justification of gradient fill pattern, center, top or left shifted.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:center
- 1:shift up and left

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5554>