

GRIDMAJOR System Variable — GstarCAD 2027

5557 kbadmin September 26, 2026 [Command Reference](#) 0 14

GRIDMAJOR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GRIDMAJOR system variable is used to set the frequency of major grid lines compared to minor grid lines.

Type	Integer
Saved in	Drawing
Initial value	5
Range	1 ~ 100

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5557>