

GRIDSTYLE System Variable — GstarCAD 2027

5559 kbadmin September 26, 2026 [Command Reference](#) 0 12

GRIDSTYLE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GRIDSTYLE system variable is used to control the grid display as points or lines.

Type	Integer
Saved in	Registry
Initial value	0
Range	0 ~ 7

System Variable Value:

- 0:** display as grid lines for model space, block editor, drawing and paper space in layout
- 1:** display as points for model space
- 2:** display as points for block editor
- 4:** display as points for drawing and paper space in layout

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5559>