

GRIDUNIT System Variable — GstarCAD 2027

GRIDUNIT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GRIDUNIT system variable is used to specify the grid space(in X and Y directions) in current viewport.

Type	2D point
Saved in	Drawing
Initial value	(0.5000,0.5000)(Imperial) or (10,10)(Metric)

To specify the default grid space to be snap space, please set the GRIDUNIT to be 0.0. All changes will display in grid after regenerating view.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)