

GRIPSIZE System Variable — GstarCAD 2027

5570 kbadmin September 26, 2026 [Command Reference](#) 0 17

GRIPSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The GRIPSIZE system variable is used to set the size of grip frame by pixels.

Type	Integer
Saved in	Registry
Initial value	5
Range	1 ~ 255

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5570>