

HALOGAP System Variable — GstarCAD 2027

5591 kbadmin September 26, 2026 [Command Reference](#) 0 6

HALOGAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HALOGAP system variable is used to specify the gap when one objects hidden by another object.

Type	Integer
Saved in	Drawing
Initial value	0

The value of HALOGAP system variable is specified by a percent of one unit and is independent of the zoom level.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5591>