

HPANNOTATIVE System Variable — GstarCAD 2027

5598 kbadmin September 26, 2026 [Command Reference](#) 0 11

HPANNOTATIVE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPANNOTATIVE system variable is used to control whether the new hatch pattern is annotative.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0: the new hatch pattern is non-annotative.
- 1: the new hatch pattern is annotative.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5598>