

HPASSOC System Variable — GstarCAD 2027

5599 kbadmin September 26, 2026 [Command Reference](#) 0 9

HPASSOC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPASSOC system variable is used to control whether the hatch pattern and fill are associative or not.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** the hatch pattern and fill have no association with defined boundary objects.
- 1:** the hatch pattern and fill have association with defined boundary objects and update with boundary objects.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5599>