

HPBOUNDRETAIN System Variable — GstarCAD 2027

5602 kbadmin September 26, 2026 [Command Reference](#) 0 20

HPBOUNDRETAIN System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPBOUNDRETAIN system variable is used to whether to create new boundary objects for new hatch pattern and fill.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0: do not create boundary objects
- 1: create boundary objects according to HPBOUND system variable

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5602>