

HPDRAWORDER System Variable — GstarCAD 2027

5606 kbadmin September 26, 2026 [Command Reference](#) 0 5

HPDRAWORDER System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPDRAWORDER system variable is used to control the order of hatches and fills.

Type	Integer
Saved in	Not saved
Initial value	3
Range	0,1,2,3,4

The HPDRAWORDER system variable can control whether the hatches and fills are display in front of other objects or behind them; or display in front of associative boundary or behind them.

System Variable Value:

- 0:** none, do not specify draw order for hatches and fills
- 1:** send to back. Send the hatches and fills back of other objects
- 2:** bring to front. Bring the hatches and fills in front of other objects
- 3:** send behind of boundary. Send the hatches and fills behind of boundary objects
- 4:** bring in front of boundary. Bring the hatches and fills in front of boundary objects

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5606>