

HPINHERIT System Variable — GstarCAD 2027

5608 kbadmin September 26, 2026 [Command Reference](#) 0 9

HPINHERIT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPINHERIT system variable is used to control whether to inherit the hatch origin when using the Inherit Properties option in HATCH and HATCHEDIT.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** the origin of hatch is gotten by HPORIGIN
- 1:** the origin of hatch is gotten hatch objects

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5608>