

HPISLANDDETECTION System Variable — GstarCAD 2027

5609 kbadmin September 26, 2026 [Command Reference](#) 0 19

HPISLANDDETECTION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPISLANDDETECTION system variable is used to control how to treat the island in the boundary of the new hatch pattern.

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1,2

System Variable Value:

- 0:Normal. Hatches islands within islands.
- 1: Outer. Hatches only areas outside of islands.
- 2: Ignore. Hatches everything within the boundaries.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5609>