

HPLAYER System Variable — GstarCAD 2027

5611 kbadmin September 26, 2026 [Command Reference](#) 0 13

HPLAYER System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPLAYER system variable is used to specify a default layer for new hatches and fills in the current drawing.

Type	String
Saved in	Drawing
Initial value	Use current

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5611>