

HPNAME System Variable — GstarCAD 2027

5614 kbadmin September 26, 2026 [Command Reference](#) 0 7

HPNAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPNAME system variable is used to set the name of default hatch pattern.

Type	Strings
Saved in	Not saved
Initial value	ANSI31(Imperial) or ANGLE (Metric)

Valid names can contain up to 34 characters without space. The value of " " means no default value. Entering a period "." can set the HPNAME system variable to be default value.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5614>