

HPSEPARATE System Variable — GstarCAD 2027

5620 kbadmin September 26, 2026 [Command Reference](#) 0 11

HPSEPARATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPSEARATE system variable is used to control whether to create a single hatch object or create separated hatch objects when hatch several closed boundaries.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0: create a single hatch object
- 1: create separated hatch objects

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5620>