

HPSPACE System Variable — GstarCAD 2027

5621 kbadmin September 26, 2026 [Command Reference](#) 0 9

HPSPACE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HPSPACE system variable is used to set the hatch space for custom hatch patterns.

Type	Real
Saved in	Not saved
Initial value	1.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5621>