

HYPERLINKBASE System Variable — GstarCAD 2027

5622 kbadmin September 26, 2026 [Command Reference](#) 0 7

HYPERLINKBASE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The HYPERLINKBASE system variable is used to specify the path used for all relative hyperlinks in the drawing.

Type	Strings
Saved in	Drawing
Initial value	""

If no value is specified, the drawing path will be used for all relative hyperlinks.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5622>