

# IMAGEFRAME System Variable — GstarCAD 2027

5625 kbadmin September 26, 2026 [Command Reference](#) 0 9

## IMAGEFRAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The IMAGEFRAME system variable is used to control whether to display and plot image and map frames.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 1       |
| Range         | 0,1,2   |

### System Variable Value:

- 0:** do not display and plot image frame  
It may temporarily display the frame when previewing selection or selecting objects
- 1:** display and plot image frames
- 2:** display but do not plot image frames

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)