

INDEXCTL System Variable — GstarCAD 2027

5628 kbadmin September 26, 2026 [Command Reference](#) 0 7

INDEXCTL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The INDEXCTL system variable is used to control whether to create layer and space index and save them to drawing files.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2,3

System Variable Value:

- 0: do not create index
- 1: create layer index
- 2: create space index
- 3: create layer index and space index

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)