

INTERFEREVPVS System Variable — GstarCAD 2027

5639 kbadmin September 26, 2026 [Command Reference](#) 0 7

INTERFEREVPVS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The INTERFEREVPVS system variable is used to specify the visual style when checking interference objects.

Type	Strings
Saved in	Drawing
Initial value	Frame

The INTERFEREOBJVS system variable can only set the visual style to save in a drawing. Users can not use the PURGE command to delete the visual style specified by INTERFEREOBJVS system variable.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5639>